

## Cables

**Table 7-2. Remote Cables (to edge connector on 1090)**

Description	Part Number
General Purpose (leaf contacts)	01040-60201
Signal-Distribution Module	01040-60202
HP 3390A Integrator	01040-60203
HP 18652A Interface	01040-60204
HP 3388A Integrator	01040-60205
HP 3392/3A Integrator	01040-60206
HP 3394/6A Integrator	03394-60550
HP 35900C Interface	35900-60710

**Table 7-3. Remote Cables (to RCI Board: Series II only)**

Description	Part Number
HP 3390A Integrator	01046-60203
HP 3392/3A Integrator	01046-60206
HP 3394A Integrator	01046-60210
HP 3396A Integrator	03394-60600
HP 1046A FLD	5061-3378
HP 35900A	5061-3378
HP 1040 DAD	01046-60202
HP 1090 LC	01046-60202
Signal-Distribution Module	01046-60202
General Purpose (spade lugs)	01046-60201

**Table 7-4. BCD Cables**

Description	Part Number
HP 3350A Series ECM module	01090-60311
HP 3392/3A Integrator	01040-60310
HP 3396A Integrator	03396-60580
General Purpose	01090-60312