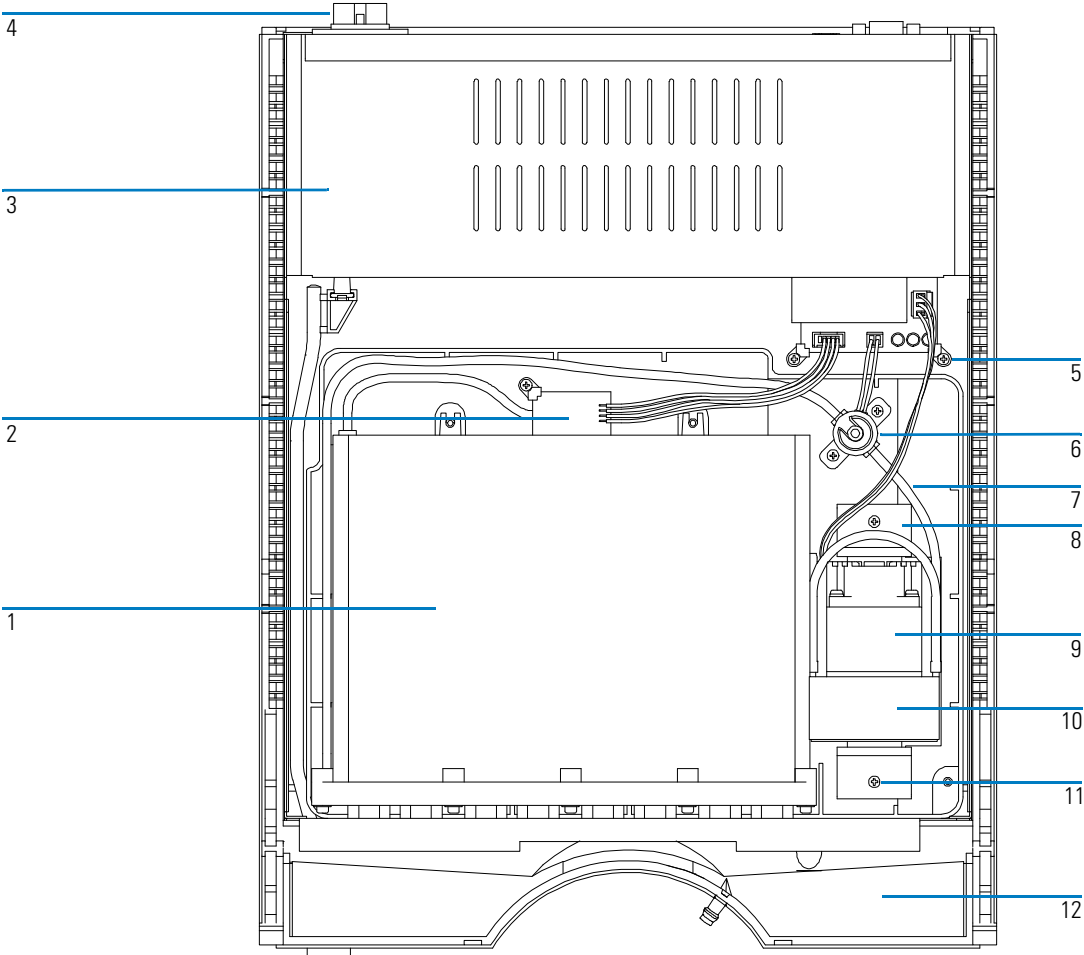

Vacuum Degasser Parts

Figure 17 **Vacuum Degasser Parts**



Parts and Materials
Vacuum Degasser Parts

Table 5

Repair Parts: Vacuum Degasser

Item	Description	HP Part Number
1	Vacuum chamber	G1322-60001
2	Sensor assembly (included in the control assembly)	no PN
3	Vacuum degasser control assembly	G1322-66500
4	Fuse 500 mA	2110-0457
5	Board clip	G1322-43100
6	Solenoid valve	G1322-60003
7	Vacuum tubes	G1322-60002
8	Fixing plate	no PN
9	Vacuum pump	G1322-60000
10	Leak tray	G1322-44100
12	Leak pan, degasser	5042-1307
