

Leak Parts

Leak Parts

Table 22

Leak Parts

Item	Description	HP Part Number
1	Leak sensor assembly	5061-3356
2	Leak pan	5042-1308
3	Leak funnel	5041-8388
4	Leak funnel holder	5041-8389
5	Clip	5041-8387
6	Tubing 120 mm lg	0890-1711
7	Tubing 1200 mm lg (part of accessory kit	0890-1711

Figure 44

Leak Parts

