

**Leak Parts**

**Leak Parts**

**Table 12**

**Leak Parts**

Item	Description	HP Part Number
1	Leak sensor	5061-3356
2, 3	Leak Kit, includes leak top and leak base	G1316-68700
4	Leak funnel	5041-8388
5	Leak funnel holder	G1316-42300
6	O-ring for ambient temperature sensor	0400-0002
7	Waste assembly, includes complete Y-tubing assembly with leak funnel	G1316-60002
	Waste tubing 1200 mm long (part of accessory kit)	0890-1711

**Figure 37**

**Leak Parts**

