
Pump-Head Assembly with Seal Wash

Table 18**Pump-Head Assembly with Seal Wash**

Item	Description	HP Part Number
	Pump-head assembly with seal wash, including items marked with (*)	G1311-60005
1*	Sapphire plunger	5062-2441
2*	Plunger housing	G1311-60000
3*	Support seal assembly	5001-3739
3	Support ring, seal wash	5062-2465
4	Secondary seal	0905-1175
5	Wash tube (2.5 m)	0890-1764
6	Gasket, seal wash (pack of 6)	5062-2484
7	Seal keeper	5001-3743
8*	Seal (pack of 2)	5062-8516
	Seal (pack of 2), for normal phase applications	0905-1420
9*	Wear retainer (pack of 10)	01018-22706
10*	Capillary outlet valve to piston 2	G1312-67300
11*	Pump chamber housing	G1311-25200
12	Active inlet valve	5062-8568
13*	Screw, purge-valve holder	0515-0175
14	Purge-valve holder	G1312-23200

Pump-Head Assembly with Seal Wash

Table 18

Pump-Head Assembly with Seal Wash, continued

Item	Description	HP Part Number
15	Outlet ball valve	G1312-60008
16*	Screw lock	5042-1303
17	Apdater	G1312-23201
18	Purge-valve assembly	01018-60009
19*	Screw M5 60 mm lg	0515-2118

Figure 42

Pump Head Assembly with Seal Wash Option

