



MSD Tune View

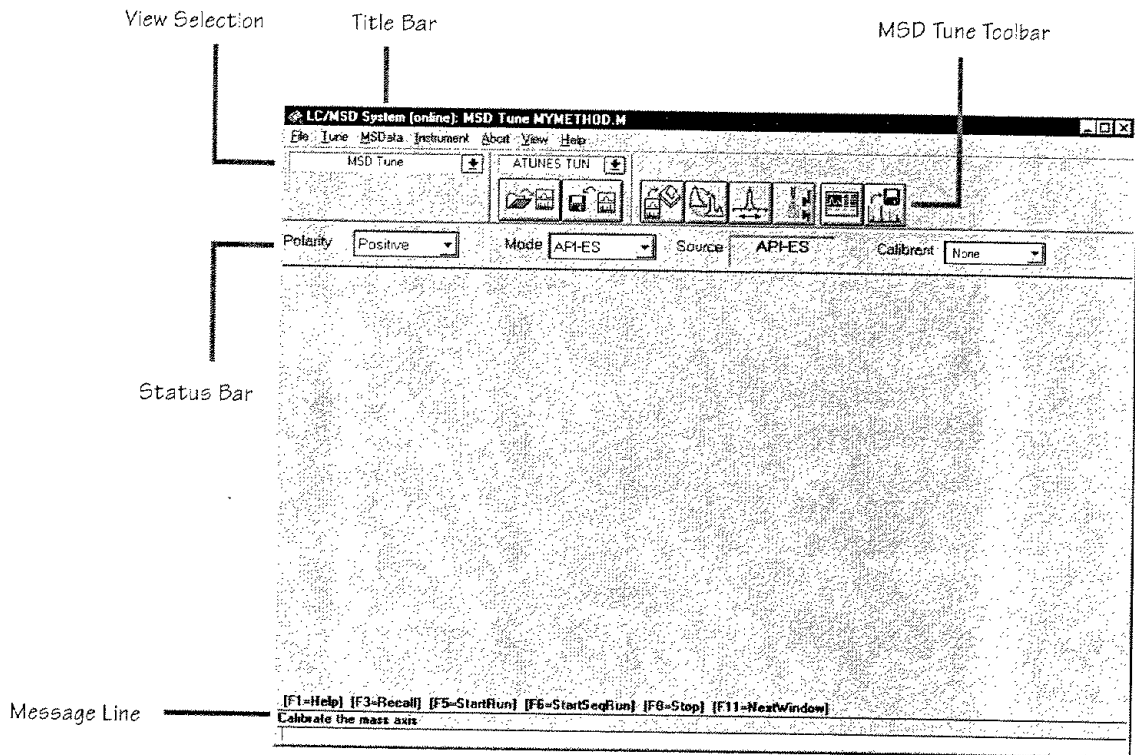

Load an LC/MSD tune file.



 Calibrate the mass axis.



Save the current tune file.



Change spray chamber parameters.



Generate a profile and scan report.



Edit LC/MSD parameters for manual tuning.



Autotune the LC/MSD and print a tune report.



Acquire multiple scans and send results to data file.