
Leak System Parts

Table 18

Leak System Parts		
Item	Description	HP Part Number
1	Leak sensor	5061-3356
2	Leak plane	G1313-44501
3	Leak tubing 120 mm*	5062-2463
4	Leak funnel	5041-8388
5	Leak funnel holder	5041-8389

* reorder gives 5 m

Figure 35

Leak System Parts

