

Leak Parts

Leak Parts

Table 15

Leak Parts

Item	Description	HP Part Number
1	Leak sensor	5061-3356
2	Tube clip	5041-8387
3	Leak pan, pump	5041-8390
4	Leak funnel	5041-8388
5	Holder, leak funnel	5041-8389
6	Tube, waste*	5062-2463

*Reorder number (5m)

Figure 36

Leak Parts

