


---

## Overview of Main Assemblies

**Figure 31** Overview of Main Assemblies

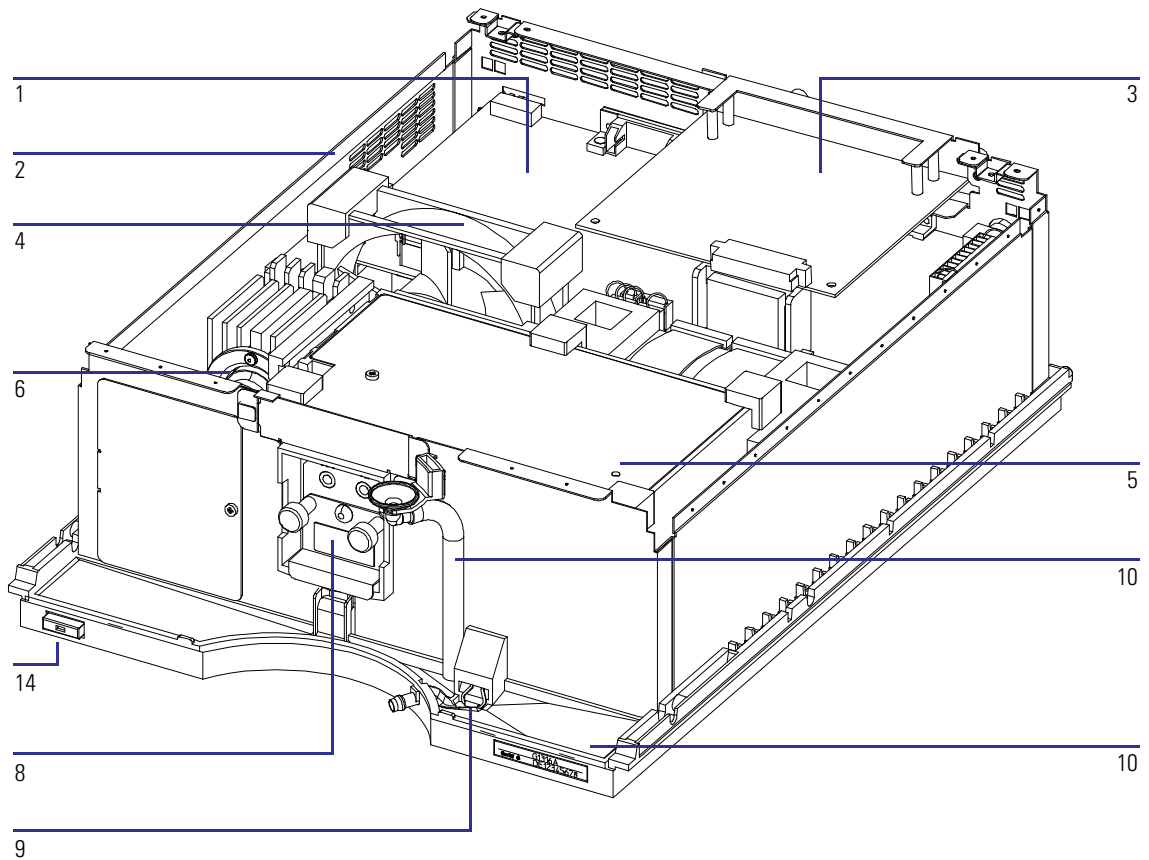

Identifying Parts and Materials  
**Overview of Main Assemblies**

**Table 10**                      **Main Assemblies**

<b>Item</b>	<b>Description</b>	<b>HP Part Number</b>
1	VWD main board VWM (exchange part)	G1314-69520
	Cable CAN assembly	5181-1516
	Hexagonal nut for HP-IB connector	0380-0643
	Hexagonal nut for RS-232C connector	1251-7788
	Nut for analog connector	2940-0256
	Washer for analog connector	2190-0699
2	Power supply assembly, additional power and status light parts, see page 159	0950-2528
3	Interface board BCD/External Contacts	G1351-68701
4	Fan assembly, additional parts, see page 146	G1314-65004
5	Optical unit (exchange part), additional optical unit parts, see page 146	G1314-69060
6	Deuterium lamp	G1314-60100
8	Standard flow cell, 10 mm 14 $\mu$ l, additional flow cell parts, see page 148	G1314-60080
	Micro flow cell, 5 mm 1 $\mu$ l, additional flow cell parts, see page 152	G1314-60081
	High pressure flow cell, 10 mm 14 $\mu$ l, additional flow cell parts, see page 150	G1314-60082
9	Leak sensor assembly	5061-3356
10	Leak handling parts	see page 160
11	Plastic parts (housing)	see page 157
12	Sheet metal parts	see page 156
13	Foam parts	see page 158
14	Power and status light parts	see page 159