

Pump-Head Assembly

Table 17

Pump-Head Assembly

Item	Description	HP Part Number
	Pump-head assembly, including items marked with (*)	G1311-60004
1*	Sapphire plunger	5062-2441
2*	Plunger housing	G1311-60000
3*	Support seal assembly	5001-3739
4*	Seal (pack of 2) Seal (pack of 2), for normal phase applications	5062-8516 0905-1420
5*	Wear retainer (pack of 10)	01018-22706
6*	Capillary outlet valve to piston 2	G1312-67300
7*	Pump chamber housing	G1311-25200
8	Active inlet valve	5062-8568
9*	Screw M4 — purge valve holder	0515-0175
10	Purge valve holder	G1312-23200
11	Outlet ball valve	G1312-60008
12*	Screw lock	5042-1303
13	Apdater	G1312-23201
14	Purge valve assembly	01018-60009
15*	Screw M5, 60 mm lg	0515-2118

Figure 41 **Pump-Head Assembly**

