



The DPU 411 printer will not work with 2000 ROM (read-only memory) versions 2.0 or greater. If your ROM version is 2.0 or greater, the version number will appear in the upper right-hand corner of the Configuration Screen. To view this screen, press **F4** from the Start up Screen. The ROM needed to run the DPU-411 printer has the Tekmar part number, 14-2982-000. If you need this ROM, call Tekmar at:

(800) 543-4461 or outside the U.S. at (513) 247-7000

Set the DIP switches on the DPU 411 printer. Here is how to set the DIP switches:

SWITCH #1

OFF /OFF /ON /ON /ON /OFF /ON /ON

SWITCH #2

ON /ON /ON /OFF /ON /ON

The baud rate (speed of data transmission) must be 1200. The default value is 1200. If necessary, you can change the baud rate through the 2000 software. See the 2000 manual for instructions on viewing or changing the baud rate.

Press the **N** or **9** key on the 2000 to start the printer.

**LSC 2000 RS232
9 PIN CONNECTOR**

RED	3	_____	RED	2
BLK	5	_____	BLK	7
WHT	8	_____	WHT	5

**DPU PRINTER
25 PIN CONNECTOR**

**INTERFACE CABLE FROM LSC 2000
TO DPU 411 PRINTER
TEKMAR PART NO. 14-3372-100**