
Pump Head Assembly

Table 16

Pump Head Assembly

Item	Description	HP Part Number
	Complete assembly, including items marked with *	G1311-60004
1*	Sapphire plunger	5062-2441
2*	Plunger housing (including spring)	G1311-60000
3*	Support ring	5001-3739
4*	Seal (pack of 2) Seal (pack of 2), for normal phase applications	5062-8516 0905-1420
5*	Wear retainer (pack of 10)	01018-22706
6*	Pump chamber housing	G1311-25200
7	Active inlet valve	5062-8568
8	Outlet ball valve	01018-60008
9*	Screw lock	5042-1303
10	Purge valve assembly	01018-60009
11*	Screw M5, 60 mm lg	0515-2118

Figure 37

Pump Head Assembly

