

Interface Cable for 2 Tekmar Units to a Perkin-Elmer
8000 Series or 9000 Autosystem GC
Tekmar Part Number 14-5397-086



Installation Instructions


Interface Part Number 14-5397-086

Interfacing Two Tekmar™ 2000s/7000s/3000s/6000s/Velocity XPTs to a Perkin Elmer 8000 Series or 9000 Autosystem GC

This interface allows two Tekmar units to operate automatically with a Perkin Elmer 8000 series or 9000 Autosystem GC (gas chromatograph).

For the interface to work properly, the switches on the 2000/7000 input/output (I/O) board need to be set as shown in the diagram included with these instructions. You do **not** need to set switches for the 3000, 6000, or Velocity XPT; you set up the interface through software. See the following instructions for your particular unit.

	WARNING	
Electrical shock hazard inside. Unplug power cord before removing panels.		

	CAUTION	
Circuit board components can be damaged by static discharge. Avoid touching the components unless otherwise noted.		

Connection to the 2000

1. To access and set the switches:
 - a. Locate the I/O board. It has two connectors extending out of its bracket, which can be accessed at the rear of the LSC 2000. (See the photograph in Section 12 of your Purge and Trap Concentrator User Manual.)
 - b. Loosen the two screws that hold the I/O board and slide it out until you see the switches labeled "U012" and "U013".
 - c. Set the switches according to the diagram included with these instructions. (The switches are in the OPEN position when they are pressed **down** at the "OPEN" label.)
 - d. Return the I/O board to its original place, being careful to properly seat it into its connector.
2. Plug the 25-pin connector into the I/O board.
3. Repeat steps 1 and 2 for the second 2000.

Connection to the 7000

1. To access and set the switches:
 - a. Loosen the two 1/4-turn fasteners on the lower left side panel.
 - b. To remove the panel, pull it **away** from the unit to release the retaining clips from the posts in the chassis, then toward the **front** of the unit to release it from the locating pins (on the rear of the unit).
 - c. There are three sets of four DIP switches on the edge of the board. They are labeled BIAS, OUTPUT and INPUT. Set the switches according to the diagram included with these instructions. (Flip the switches **up** to put them in the OPEN position.)
 - d. Reinstall the left side panel by pressing it back onto the locating pins and inserting the retaining clips into the posts in the chassis.
 - e. Secure the panel with the two 1/4-turn fasteners.
2. The I/O board has two connectors extending out of its bracket, which can be accessed at the rear of the 7000. Plug the 25-pin connector into the I/O board.

 2000s/7000s/3000s/6000s/ VELOCITY XPTs to a PE 8000 Series or 9000 Autosystem GC (continued)

Connection to the 7000 (continued)

- Repeat Steps 1 and 2 for the second 7000.

Connection to the 3000,6000, Velocity XPT

- Turn off the Tekmar unit.
- Locate the Tekmar unit's interface board. The board has two connectors extending out of its bracket. These connectors can be accessed at the rear of the Tekmar unit.
- Plug the 25-pin connector from the Tekmar cable into the matching connector on the interface board.
- Repeat Steps 1 through 3 for the second 3000 or 6000.

Specifying the GC Port (3000,6000,Velocity XPT only)

- Turn on the Tekmar unit.
- At the System Error/System Reset Screen, press the ENTER key.
- Allow the system to run through the automatic self-test.
- At the Standby Screen, press the CONF key. The Configuration Screen appears on the display.
- At the Configuration Screen, press A (GC I/O Port). The GC Port Screen appears on the display.
- Choose the GC Port. You have two choices: *Standard* or *User*. Choose **Standard**. Press any numeric key to cause the display to toggle from one choice to another. Press ENTER to save your selection.
- Turn off the Tekmar unit.
- Repeat Steps 1 through 7 for the second 3000 or 6000.

Connection to the GC

- Locate the accessory connection panel on the GC. The panel is on the side of an 8000 series GC. The panel is on the top of a 9000 Autosystem GC.
- Referring to the table below and the illustration on the following page, connect the wires from the Tekmar cable to the terminals on the accessory connection panel.

This wire from the Tekmar Cable:	Attaches to this GC Terminal:		The Description of the terminal is:	
	8000	Autosystem	8000	Autosystem
Green	#2	#10	Ready	Ready Out (C)
White	#3	#11	Ready	Ready Out (NO)
Black	#9	#3	External Start (LO)	External Start (LO)
Red	#10	#4	External Start (HI)	External Start (HI)

Table 1 GC Connections

 2000s/7000s/3000s/6000s/ Velocity XPTs to a PE 8000 Series or 9000 Autosystem GC (continued)

8000 SERIES

9000 AUTOSYSTEM

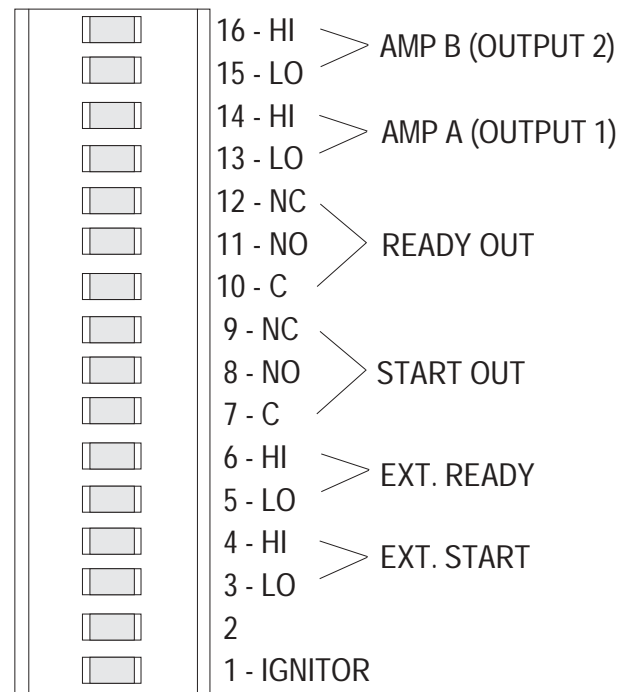


Figure 1 Accessory Connection Panels



7143 East Kemper Road, Cincinnati, Ohio 45242-9576
 (800) 543-4461 • Outside the U.S. (513) 247-7000 • Service (800) 874-2004
 Telefax (513) 247-7050