


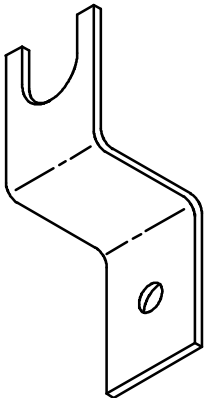



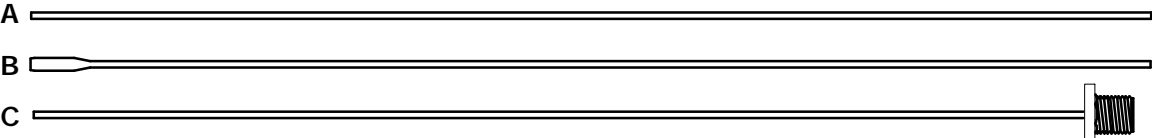
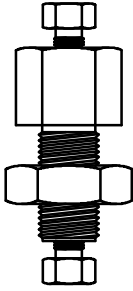
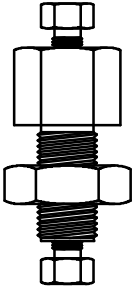




 <p>1/8- INCH SS NUT (0100- 0057), FRONT FERRULE (0100- 0034), AND BACK FERRULE (0100- 0038) (A PACKAGE OF 20 SETS OF NUTS AND BOTH FERRULES IS AVAILABLE AS 5080- 8751)</p>	 <p>1/16- INCH REDUCER/RESTRICTOR (18900- 80210)</p>
 <p>7µM SAMPLE INLET FILTER (0101- 0532)</p>	 <p>1/16- INCH TUBE REDUCING UNION (0100- 0073)</p>
<p>MICROMETERING NEEDLE (ADJUSTABLE RESTRICTOR) VALVE MOUNTING BRACKET (LOCATED ON LEFT SIDE CARRIER BEHIND ACCESS DOOR (18900- 00980))</p> 	 <p>1/16- INCH SS UNION (0100- 0124)</p>
	 <p>BRASS RETAINER NUT (0590- 0385) (USED WITH 07675- 80050)</p>
	 <p>1/16- INCH ZERO DEAD VOLUME UNION (0100- 0900)</p>
 <p>A: Tube, 1/16- inch SS 102- mm long 18900- 20230        Tube, 1/16- inch SS 203- mm long 18900- 20240        Tube, 1/16- inch SS 400- mm long 18900- 20280        Tube, 1/16- inch SS 575- mm long 18900- 20281        Tube, 1/16- inch SS 510- mm long 18900- 20290        Tube, 1/16- inch SS 560- mm long 18900- 20300        Tube, Nickel, 1/16- inch 460- mm long 18900- 20506        Tube, Nickel, 1/16- inch 663- mm long 18900- 20507        B: Tube, 1/16- inch w/1/8- inch flare SS 360 mm long 1530- 2163        Tube, 1/16- inch w/1/8- inch flare SS 520 mm long 1530- 2167        Tube, 1/16- inch w/1/8- inch flare SS 280 mm long 18900- 20250        C: Tube, 1/16- inch w/1/8- inch bulkhead fitting 520 mm long 07675- 80050        Tube, Nickel, 1/16- inch w/1/8- inch bulkhead fitting 460 mm long 18900- 80255</p>	

**Figure 11. Miscellaneous Hardware (Sheet 1 of 2).**

 <p>SS BULKHEAD ZERO DEAD VOLUME UNION (FOR .530 CAPILLARY COLUMNS) (0100- 1515)</p>	 <p>SS BULKHEAD ZERO DEAD VOLUME UNION (FOR .320 CAPILLARY COLUMNS) (0100- 1527)</p>
 <p>1/16- INCH I.D. POLYIMIDE FERRULE (0100- 1512)</p>	 <p>POLYIMIDE LINER (0.6- 0.8 mm O.D.) (FOR .530 CAPILLARY COLUMNS) (0100- 1513)*</p>
 <p>1/16- INCH COUNTERBORE NUT (0100- 1511)</p>	 <p>POLYIMIDE LINER (0.5 mm O.D.) (FOR .320 CAPILLARY COLUMNS) (0100- 1514)*</p>
<p>*Assembly tool for liners shown above is 18900- 20850.</p>	

**Figure 11. Miscellaneous Hardware (Sheet 2 of 2).**